


- Place SAM 01 profile block on side spindle 2.
- Place SAM 01 profile block on side spindle 3.
- Place SAM 3526T1 profile block on the first top spindle.
- Place SAM 3526T2 profile block on the second top spindle.

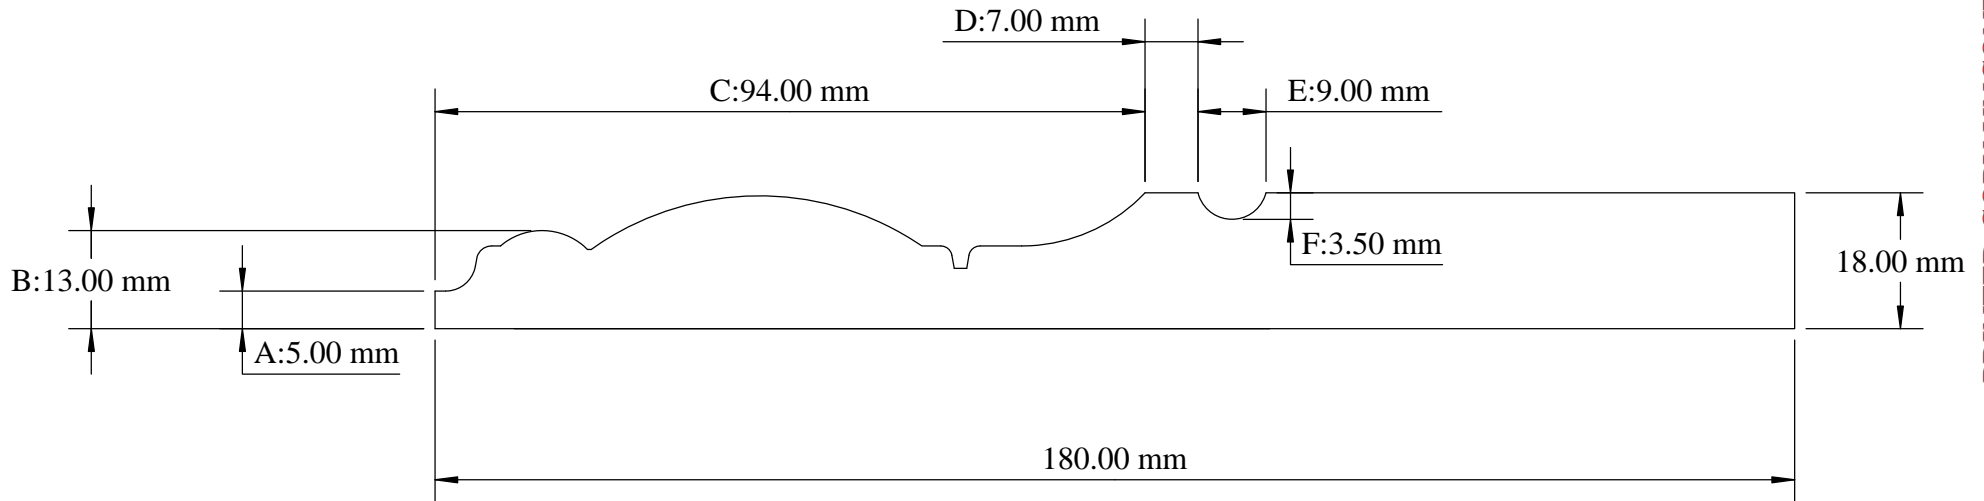

PRINTED COPY UNCONTROLLED

REF Victoriana Skirting

AREA MACHINED AWAY 473.35 SQMM.

MOULDER	3,4,5,6,7
PASSES	1
DRAWN BY	S McMaster
DATE	20/10/14
SCALE	1:1
REV:	1
AUTH:	
TOLERANCE	+/- 0.5MM

# SAM MOULDINGS

Newpark Industrial Estate Greystone Road Antrim BT41 2RU  
 Tel : (028) 9442 8288 Fax : (028) 9442 8244

Website: [www.sammouldings.co.uk](http://www.sammouldings.co.uk) Email: [info@sammouldings.co.uk](mailto:info@sammouldings.co.uk)

PROFILE	DRAWN BY	S McMaster	REV:	1
SAM 3526	DATE	20/10/14	AUTH:	
	SCALE	1:1	TOLERANCE	+/- 0.5MM