


Place SP 719T1 profile block on side spindle 2.
 Place SAM 01 profile block on side spindle 3.
 Place SP 719T2 profile block on the first top spindle.
 Place SP 719T3 profile block on the second top spindle.
 Place SP 719T4 profile block on the last bottom spindle.

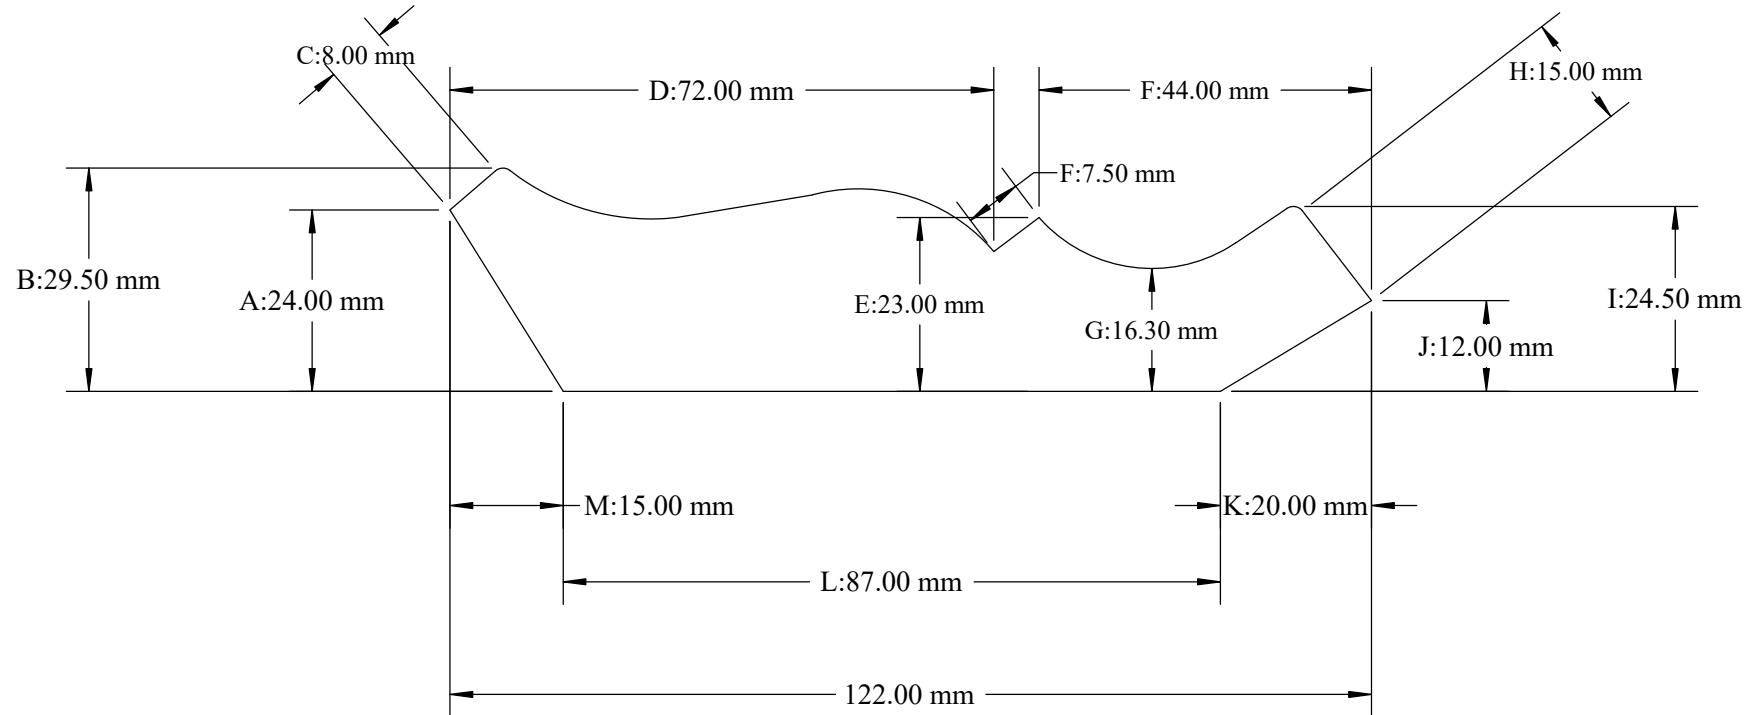

PRINTED COPY UNCONTROLLED

AREA MACHINED AWAY 1204.15 SQMM.

MOULDER	ANY
PASSES	1
DRAWN BY	M.KIRKPATRICK
DATE	11/4/01
SCALE	1:1
REV:	AUTH:
TOLERANCE +/- 0.5MM	

SAM MOULDINGS

Newpark Industrial Estate Greystone Road Antrim BT41 2DU
 Tel : (028) 9442 8288 Fax : (028) 9442 8244

Website: www.sammouldings.co.uk Email: info@sammouldings.co.uk

SP 719

PROFILE

DRAWN BY

DATE

SCALE

M.KIRKPATRICK

11/4/01

1:1

REV:

AUTH:

TOLERANCE +/- 0.5MM