


Place SAM 01 profile block on side spindle 2.
 Place SAM 01 profile block on side spindle 3.
 Place Angle B profile block on the first top spindle, to produce Chamfer.

Please tick in box - Is chamfer a visible top surface for priming YES NO

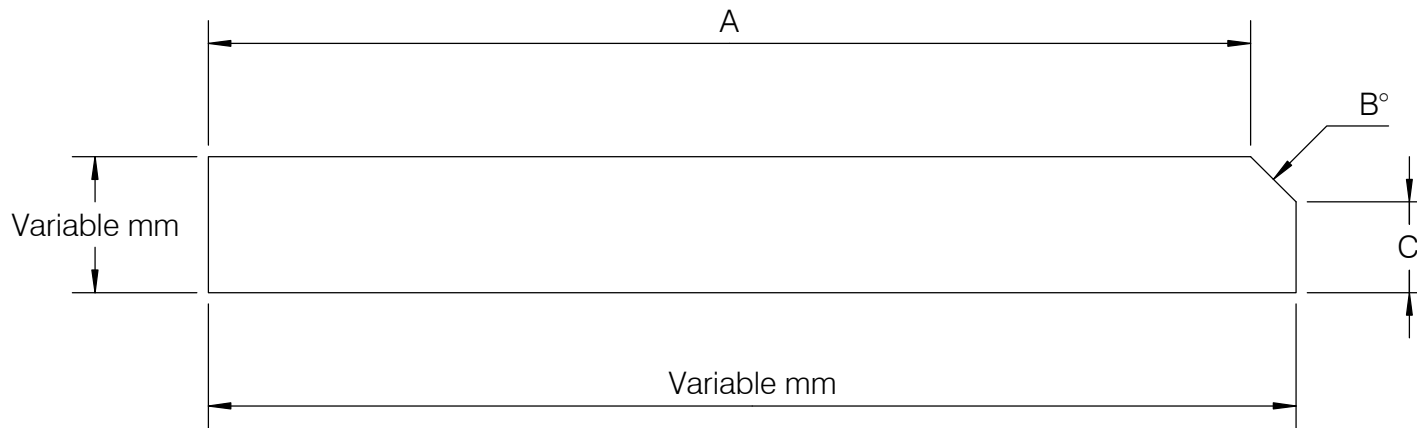

CUSTOMER TO CONFIRM DIMENSIONS A+B+C INCLUDING PRODUCT WIDTH AND THICKNESS.

PRINTED COPY UNCONTROLLED

AREA MACHINED AWAY: AxC SQMM



Newpark Industrial Estate
 Greystone Road, Antrim
 BT41 2RU
 T: +44 (0)28 9442 8288 F: +44 (0)28 9442 8244
 E: team@samonline.co.uk
 W: www.samonline.co.uk

			MOULDER	ANY
			PASSES	1
	PROFILE	DRAWN BY	S McMaster	REV: 1
	SP 601	DATE	18/06/2019	AUTH:
		SCALE	1:1	TOLERANCE +/- 0.5MM